




VARIABLE SPEED DRIVE CONTROLLER

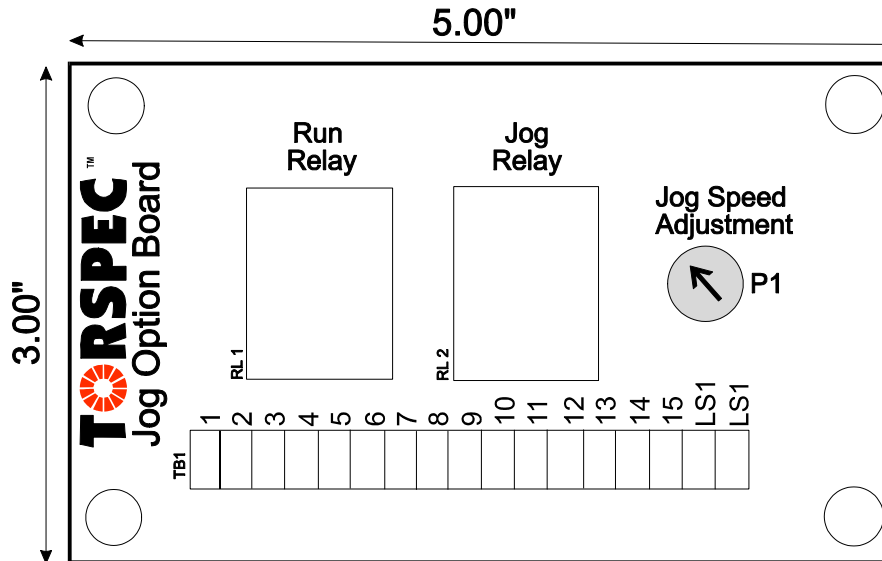

INSTALLATION AND SETTING UP MANUAL JOG OPTION BOARD

WARNING

Disconnect all incoming power before working on this equipment.

Follow power lockout procedures.

Use extreme caution around electrical equipment.

Do not touch the circuit board while power is applied.

International Inc.
40 Claireville Drive, Etobicoke
(Toronto), Ontario, Canada M9W 5T9
Phone: (416) 213-1026
Fax: (416) 213-0821
E-mail: Sales@torspec.com

International (USA) Inc.
13507-C East Boundary Road
Midlothian (Richmond), VA U.S.A. 23112
Phone: (804) 744-5521
Fax: (804) 744-9131
E-mail: Torspecusa@aol.com


Web-Site: www.torspec.com

Manufacturers & Suppliers of World Class Quality Variable Speed Drives & Controls

TORSPEC JOG OPTION BOARD

Designed for use with the Torspec 5001TCP Chassis Mount Controller, the Torspec Jog Option Board can be adapted to any drive requiring a separate adjustable jog speed.

The Torspec Jog Option Board provides run and jog relays for use with momentary contact push buttons, a jog potentiometer and a terminal strip for easy wiring. An additional feature gives about a 6% increase in speed when a switch is closed.

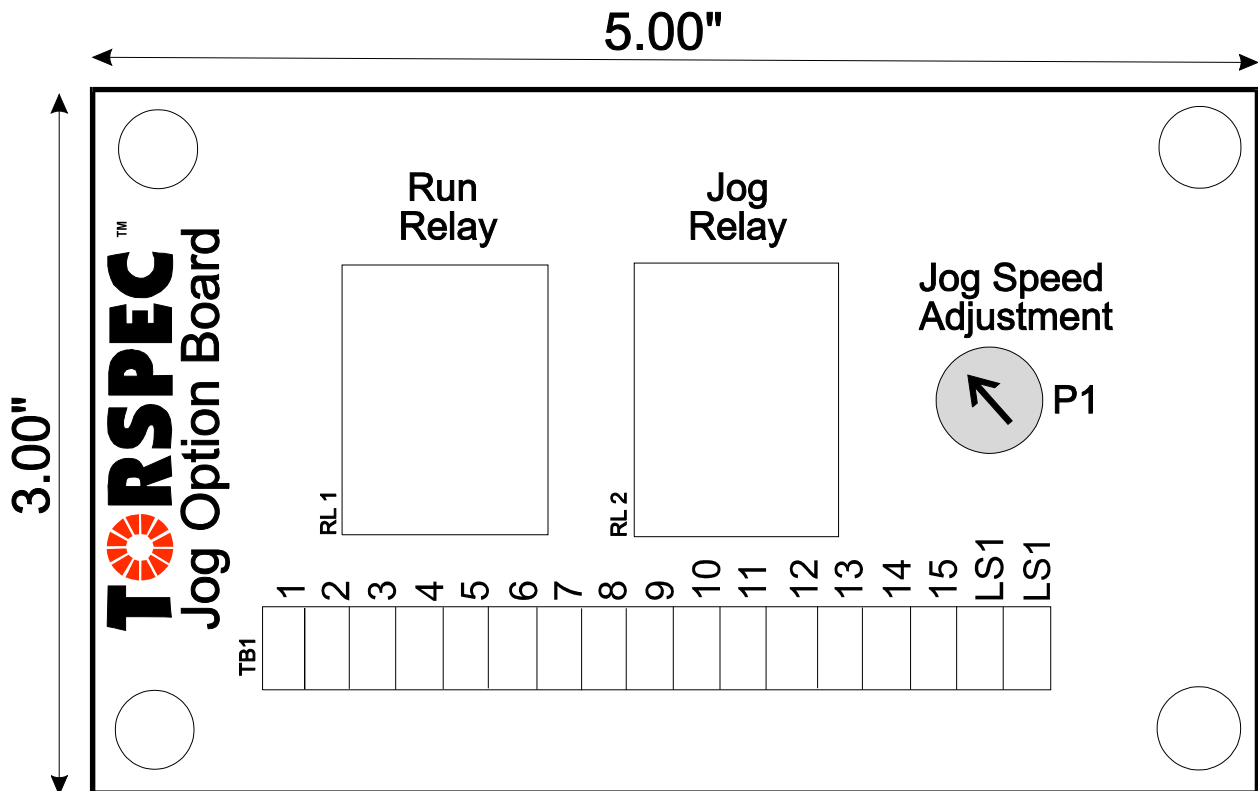

SET UP INSTRUCTIONS: SEE CONNECTION DIAGRAM

Jog Option Board Connection Diagram

