


TORSPEC™ VARIABLE SPEED DRIVE

INSTALLATION AND MAINTENANCE INSTRUCTIONS

TORSPEC MODEL 160TCD-M

TORSPEC VARIABLE SPEED DRIVES

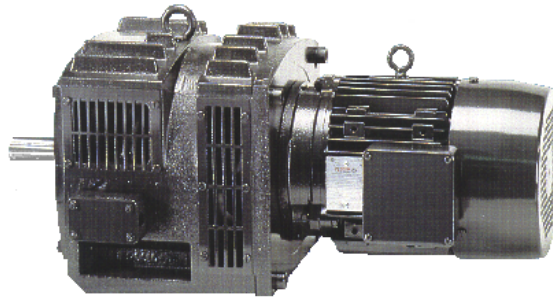

SIMPLE - RUGGED - RELIABLE

WARNING

Disconnect all incoming power before working on this equipment.

Follow power lockout procedures.

Use extreme caution around electrical equipment.

Do not touch the circuit board while power is applied.

TORSPEC™

Torspec International Inc.
40 Claireville Drive, Etobicoke
(Toronto), Ontario, Canada M9W 5T9
Phone: (416) 213-1026
Fax: (416) 213-0821
E-mail: sales@torspec.com

Torspec International (USA) Inc.
13507-C East Boundary Road
Midlothian (Richmond), VA U.S.A. 23112
Phone: (804) 744-5521
Fax: (804) 744-9131
E-mail: Torspecusa@aol.com

Web-Site: www.torspec.com

Manufacturers & Suppliers of World Class Quality Variable Speed Drives & Controls

TORSPEC MODEL 160TCD-M DISMANTLING INSTRUCTIONS

CAUTION - BE SURE TO DISCONNECT POWER AND FOLLOW LOCK-OUT PROCEDURES AS SPECIFIED BY LAW ***BEFORE*** OPENING ANY TERMINAL BOXES OR TOUCHING ANY WIRING.

D1: Open terminal box and disconnect drive wires. **EXTREME CAUTION** should be exercised with the small wires going to the tach generator, as they can be easily broken.

Hint: (Look for broken wires, or poor connections.)

D2: Remove four bolts holding output assembly to main casing. Remove output assembly while feeding wires through the hole, once the wires are free, the output assembly can be completely removed.

Hint: (Look for physical damage, remove any build up of foreign material on polewheel which could cause binding. Binding will cause the drive to run at full speed when the motor is started even if the clutch is turned off.)

D3: The polewheel is removed by removing the bolt in the center that is attaching it to the output shaft and inserting a larger 16mm bolt to push it off.

D4: The coil is held in place by a circlip at the back and silicone sealant at the front. After removing the circlip it is necessary to use a thin blade to break the sealant between the coil form and the front of the output assembly. ***Care must be used, the former is breakable.***

Hint: (Look for physical damage, signs of overheating, coil should be 20 to 40 ohms depending on size. Low resistance will cause the control fuses to blow, too high will result in poor performance.)

D5: To separate the coil and tach wires cut the waxed string and ***carefully*** slide the rubber tube off. If the tach is being replaced, a string or small wire tied to the old tach wires before removing can be used to assist in pulling in the new wires.

Hint: (Look for broken wires, tach should be 220 ohms, a bad tach will cause the drive to run at full speed when the controller is energized.)

D6: Remove the tach cover plate and tach stator. The tach armature is held in place by a set screw and can be pulled off. ***Be sure not to damage the magnetic strip.***

Hint: (Look for broken magnetic strip, this will give the same symptoms as a bad tach.)

D7: Remove the shaft out of the assembly from the input shaft side by pressing on the polewheel side of the shaft.

D8: The rear bearing that is still in the housing and the front bearing still on the shaft can be removed after the retaining clips have been taken off.


D9: Remove the motor adapter flange from the main casing. Remove the 6 cap head screws holding the torque tube assembly to the hub on the motor shaft. Two grub screws hold the hub on the shaft, be sure to remove these grub screws completely as one is counter sunk into the shaft.

Hint: (Look for pitting and/or lifting of the copper lining on the torque tube, this is what transmits the power and damage here will cause the drive to be short of power)

TORSPEC MODEL 160TCD-M ASSEMBLY INSTRUCTIONS

USE A THREAD LOCKING COMPOUND ON ALL BOLTS

- A1: If the motor is being replaced it will be necessary to dimple the shaft in the same location as the original motor. ***This location is critical for proper alignment.*** Use an anti-seize compound on the shaft. Mount the torque tube hub with one of the grub screws in the dimple
- A2: Mount the motor adapter flange onto the motor flange with the flat on the bottom. Mount the torque tube onto the hub. Bolt the motor assembly onto the main casing.
- A3: Mount the pre-greased rear bearing onto the shaft by pressing on the outer and inner race with a press, ***do not hammer.*** Press the front outer bearing into the stator body and the inner race on to the shaft with the press. Insert the shaft assembly into the output assembly from the rear side by pressing on the inner and outer rear bearings. Install rear bearings retaining plate onto stator body.
- A4: Mount the armature onto the shaft. Feed the tach wires through the hole in the output assembly and slide the tach stator plate over the shaft and bolt to the output assembly. Be sure not to pinch the tach wires.
- A5: Apply silicone rubber to the front of the main coil and push the coil onto the output assembly. Install the coil circlip. Push the tach wires, then the coil wires into the rubber sleeving. Tie off with a piece of waxed string.
- A6: Bolt the polewheel onto the shaft ensuring the spring pins are in place and the polewheel completely seats.
- A7: Insert the output assembly into the casing while feeding the wires through the hole. Bolt into place on main casing.

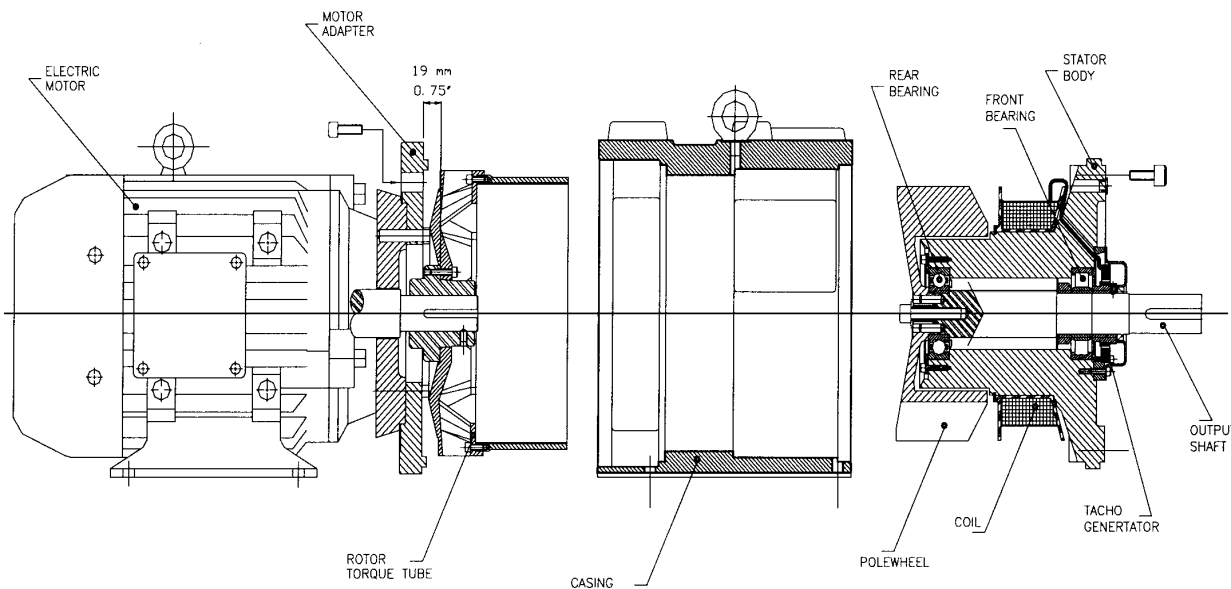

TORSPEC MODEL 160TCD-M PARTS LIST

PART NO.	DESCRIPTION
4307M	OUTPUT SHAFT D132 38MM CODE S1
4314M	OUTPUT FLANGE D132 FIXED BY 4-M12X50 SOCKET HD. CAP CODE F1
4316M	MOTOR ADAPTER D132 FIXED BY 4-M16X40 SOCKET HD. CAP CODE D1
4317M	OUTPUT SHAFT D132 38MM CODE F1
4417M	MOTOR ADAPTER D160 FIXED BY 4-M16X50 SOCKET HD. CAP CODE D1
4320M	METRIC MOTOR SEE MOTOR NAMEPLATE FOR DETAILS FIXED BY D132-M12X30 HEX HD. CAP II D160=4-MM16X40 HEX HD. CAP
4322M	ROTOR HUB D132 38MM FIXED BY 1-M8X10 CUP POINT GRUB SCREW, 1-M8X10 CONE POINT GRUB SCREW CODE D1
4323M	ROTOR HUB D160 42MM FIXED BY 1-M8X10 CUP POINT GRUB SCREW, 1-M8X10 CONE POINT GRUB SCREW CODE D1
4325M	INPUT ASSY. METRIC CODE K1
4350M	KEYSTOCK METRIC D132 8X10X56 CODES S1, F1
4001	CASING
4002	STATOR BODY ASSY. FIXED BY 4-M12X40 SOCKET HD. CAP
4004	TACH COVER 4-M5X35 SOCKET HD. CAP AND 4-FLAT WASHERS
4009	TACH GENERATOR MOUNTING PLATE
4016	GRILLES SMALL INLET FIXED BY 4-M6X10 PAN HD. SLOTTED
4017	GRILLES LARGE OUTLET FIXED BY 6-M6X10 PAN HD. SLOTTED
4018	GREASE BAFFLE
4019	BEARING SPACER
4020	NILOS RING 6308JV
4022	BEARING FRONT NU308
4024	BEARING REAR RETAINING PLATE FIXED BY 4-M5X16 SOCKET HD. CAP
4028	OIL SEAL 40X52X8 STD. & CODE F1
4030	COIL RETAINING RING
4060	STD. COIL FOR 4/11KW, 2/18.5KW FIXED BY PART NO. 4030
4063	STD. COIL FOR 4/5.5KW, 4/7.5KW, 2/11KW, 2/15KW FIXED BY PART NO. 4030
4066	HP COIL FOR 4/11KW, 2/18.5KW FIXED BY PART NO. 4030 CODES H10, H20, N1, N2
4069	HP COIL FOR 4/5.5KW, 4/7.5KW, 2/11KW, 2/15KW FIXED BY PART NO. 4030 CODES H10, H20, N1, N2
4073	TORQUE TUBE/ ROTOR ASSY. 4 POLE FIXED BY 6-M6X30 SOCKET HD. CAP
4079	POLEWHEEL STD. FIXED BY 1-M12X40 HEX. HD. CAP, 1-M12 FLAT WASHER, 2-M8X24 SLOTTED SPRING PINS CODE R
4084	TORQUE TUBE /ROTOR ASSY. FAN DRIVE FIXED BY 6-M6X30 SOCKET HD. CAP SAME AS 4073
4087	POLEWHEEL REDUCED FIXED BY 1-M12X40 HEX. HD. CAP, 1-M12 FLAT WASHER, 2-M8X24 SLOTTED SPRING PINS CODE R
4089	TORQUE TUBE/ROTOR ASSY. 2 POLE FIXED BY 6-M6X30 SOCKET HD. CAP
4097K	POLEWHEEL REDUCED C/W AXIAL BLADES FIXED BY 1-M12X40 HEX. HD. CAP, 1-M12 FLAT WASHER, 2-M8X24 SLOTTED SPRING PINS CODE R
4173	TORQUE TUBE NICKEL PLATED/ROTOR ASSY. 4 POLE FIXED BY 6-M6X30 SOCKET HD. CAP SAME AS 4073
4184	TORQUE TUBE NICKEL PLATED/ROTOR ASSY. FAN DRIVE FIXED BY 6-M6X30 SOCKET HD. CAP SAME AS 4073
4189	TORQUE TUBE NICKEL PLATED/ROTOR ASSY. 2 POLE FIXED BY 6-M6X30 SOCKET HD. CAP SAME AS 4089
4302	TOTALLY ENCLOSED COVERS LEFT HAND FIXED BY 5-M6X16 SOCKET HD. CAP CODES T1, T2
4303	TOTALLY ENCLOSED COVERS RIGHT HAND FIXED BY 5-M6X16 SOCKET HD. CAP CODES T1, T2
4500	TACH ARMATURE FIXED BY 1-M5X8 CUP POINT GRUB SCREW
4501	HOSEPROOF COVERS SMALL INLET FIXED BY 4-M6X40 SOCKET HD. CAP CODES N1, N2
4502	BAFFLES FOR PART NO. 4501 CODES N1, N2
4503	HOSEPROOF COVERS LARGE OUTLET FIXED BY 4-M6X40 SOCKET HD. CAP CODES N1, N2
4504	BAFFLES FOR PART NO. 4503 CODES N1, N2
9005	TERMINAL BOX FIXED BY 4-M5X60 STUD, 4-M5 RUBBER WASHERS, 4-M5 FLAT WASHERS, 4-M5 LOCKNUT
9006	TERMINAL BOX LID
9008	TACH GENERATOR ASSY. FIXED BY 4-M4X16 SOCKET HD. CAP, 4-M4 FLAT WASHERS
9014	TERMINAL BOX GASKET X3 FOR CODES H10, H20, N1, N2, T1, T2
9021	BEARING REAR 6308Z
9034	EYEBOLT M12
9035	PLASTIC PLUG 1 - #12 CODES T1, H10, N1
9035	PLASTIC PLUG 2 - #12 CODES T1, T2
9039	NAMEPLATE FIXED BY 4-6X1/4 TAPPING SCREWS
9305	TERMINAL BLOCK 4 WAY FIXED BY 1 -M5X12 SOCKET HD. CAP
9306	TERMINAL BLOCK 6 WAY FIXED BY 1-M5X12 SOCKET HD. CAP CODES B? Y?

DRIVE FEET MOUNTING PROCEDURES

F1: Push slotted Shims under the Coupling lowest mounting feet and moderately tighten the Bolts

F2: Align the unit. Insert Feeler Gauges under the remaining feet during the alignment process to level the unit.

F3: Replace feeler gauges with equal thickness of slotted Shims. Use a few thick shims rather than a large number of thin shims.

F4: Alternately tighten Bolts.

F5: Recheck alignment and change shims as required.

F6: Push slotted Shims under AC Motor mounting feet and moderately tighten the bolts.

Note:

-The decision to mount (bolt) the Motor feet should be based on the application dynamics. (I.e. vibration/support). It is not always necessary to mount the motor feet and is specifically motor size related.

-When Drives are purchased on base, base must also be leveled and secured.

Warning:

Failure to properly mount and level drive unit may result in distortion to the drive housing, torque tube, mechanical failure, misalignment, and premature bearing wear.